

TL70 Wireless Modular Tower Light



Datasheet

Sure Cross® Wireless TL70 Tower Lights combine the best of Banner's popular Tower Light family with its reliable, field proven, Sure Cross wireless architecture.



- Available in 900 MHz and 2.4 GHz ISM Bands
- Up to five colors plus audible in one device
- Rugged, water-resistant IP65 housing with UV-stabilized material
- Bright, uniform indicator segments appear gray when off to eliminate false indication from ambient light
- Two-way communication - light segments can be controlled with the input wires or the Gateway
- Input wires can be configured as auxiliary sourcing inputs from external devices or as a 20 Hz, 32-bit event counter

TL70 Base

Housing

B-TL70

Base Segment

Radio Band

DXN2

DXN2 - Node 2.4 GHz

DXN9 - Node 900 MHz

Connection

Q5

5 = 2 m, 5-wire Integral Cable

8 = 2 m, 8-wire Integral Cable

Q5 = 5-pin M12/Euro-style Integral QD

Q8 = 8-pin M12/Euro-style Integral QD

QP5 = Pigtail with 5-pin M12/Euro-style QD

QP8 = Pigtail with 8-pin M12/Euro-style QD

QD models require mating cordset

Housing Color

Blank

Blank = Black

C = Gray

TL70 Segments

Housing

SG-TL70

TL70 Segment

Color/Alarm

R

G = Green

Y = Yellow

R = Red

B = Blue

W = White

A = Audible

Housing Color

Blank


Blank = Black

C = Gray

Select the 5-pin base for tower light configurations of up to three modules. Select the 8-pin base for tower light configurations of up to six modules, or when the event counter will be enabled.

- Example base model number: B-TL70DXN2-Q5
- Example light segment model number: SG-TL70-G
- Example audible segment model number: SG-TL70-A

TL70 Pre-Assembled Models

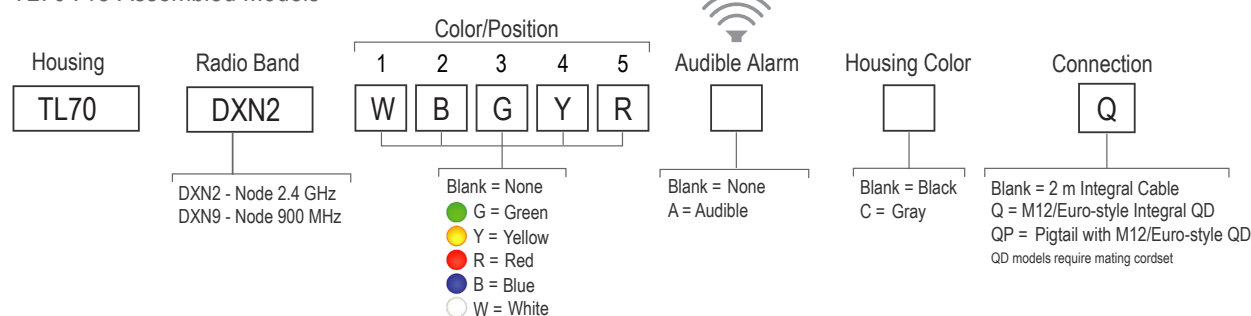


- Example pre-assembled model number: TL70DXN2GYRAQ



Configuring the Modules




Turn on the appropriate DIP switch to set the order of the components, counting up from the tower light's base.

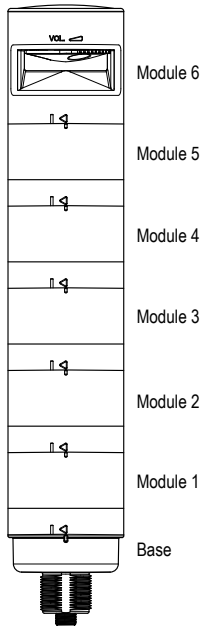

| Assembly Options | | DIP Switches | | | | | | | |
|------------------------------|-------------------|--------------|----|----|----|----|----|-----|-----|
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Light and Audible Components | Module 1 | ON | | | | | | | |
| | Module 2 | | ON | | | | | | |
| | Module 3 | | | ON | | | | | |
| | Module 4 | | | | ON | | | | |
| | Module 5 | | | | | ON | | | |
| | Module 6 | | | | | | ON | | |
| Light Module Flash Rate | 3 Hz | | | | | | | ON | OFF |
| | 1.5 Hz | | | | | | | ON | ON |
| | Solid On* | | | | | | | OFF | OFF |
| Audible Module Settings | Pulse 1.5 Hz | | | | | | | ON | OFF |
| | Chirp Alarm | | | | | | | ON | ON |
| | Siren Alarm | | | | | | | OFF | ON |
| | Continuous Alarm* | | | | | | | OFF | OFF |

* Factory default setting

Assembling the Modules

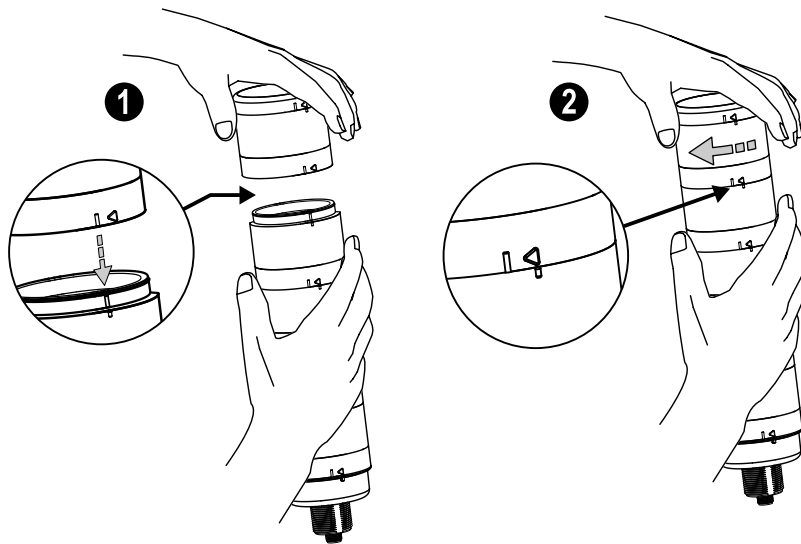


To assemble the modules:

1. Align the notches on each module.
2. Press together.
3. Rotate the top module clockwise to lock into place (notches shown in the locked position).

Configuring the Radio Module

Set the Radio Module DIP Switches

Before applying power to the device, set the radio module's DIP switches. Default configurations are noted with (*).

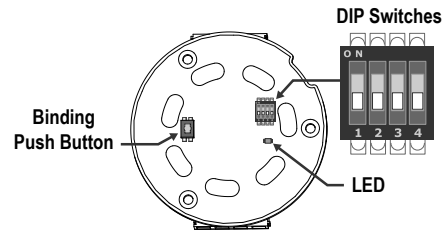

| DIP Switch 1: Radio Transmit Power | 900 MHz Models | 2.4 GHz Models |
|------------------------------------|---------------------------|----------------|
| OFF * | 1 Watt (30 dBm) operation | Disabled |
| ON | 250 mW (24 dBm) operation | |

The 900 MHz radios can be operated at 1 watt (30 dBm) or 250 mW (24 dBm). While the Performance radios operate in 1 Watt mode, they cannot communicate with the older 150 mW radios. To communicate with the older 150 mW radios, operate this radio in 250 mW mode. For 2.4 GHz models, this DIP switch is disabled. The transmit power for 2.4 GHz is fixed at about 65 mW EIRP (18 dBm), making the 2.4 GHz Performance models automatically compatible with older 2.4 GHz models.

| DIP Switch 2: Input Wires | 900 MHz Models and 2.4 GHz Models |
|---------------------------|---|
| OFF * | Input wires control light segments |
| ON | Disables wired input control of light segments and converts wires to auxiliary Inputs |

If there are no tower light modules at the end of the input wires to turn on, the inputs still function as a sourcing input.

| DIP Switch 3: Event Counter | 900 MHz Models and 2.4 GHz Models |
|-----------------------------|---|
| OFF * | Default I/O operation |
| ON | Configure input 5 as a 32-bit synchronous counter at a maximum frequency of 20 Hz; disable input 6 (the counter requires two registers) |

The event counter is active for RF firmware revision 5.3 or higher. In the default position (OFF), the input 1 through 6 control the tower lights. When DIP switch 3 is ON, input 5 wire is the counter input and input 6 wire is disabled. Registers 5 and 6 store the 32-bit synchronous counter count. Inputs 5 and 6 are independent from the lights and will not drive any lights they are wired to. Input wires 1 through 4 function normally.

| DIP Switch 4: Bit Packing I/O | 900 MHz Models and 2.4 GHz Models |
|-------------------------------|--|
| OFF * | Default I/O operation |
| ON | Bit-packed I/O with all inputs in Modbus register 1 and all outputs in Modbus register 9. All other Modbus registers are disabled. |

Bit packing is active for RF firmware revision 5.8 or higher. Bit packing uses a single register, or range of contiguous registers, to represent I/O values. This allows you to read or write multiple I/O values with a single Modbus message. Input 1 is stored in the least significant bit of register 1. Output 1 is stored in the least significant bit of register 9.


Event Counter

To use the event counter, the measured (logic high) signal must be greater than or equal to 25 ms. The 32-bit count is stored in I/O registers 5 and 6.

To zero out (clear) the event counter,


- Map an input/button on a Gateway to Node register 14 to clear the counter when the input/button is activated; or
- From a host system, write a 1 (the output must transition from a zero to a one to reset the counter) to Node register 14 or write a 5424 (0x1530) to Node control register 15.

RF firmware revision 5.3 or higher is required to use this feature.

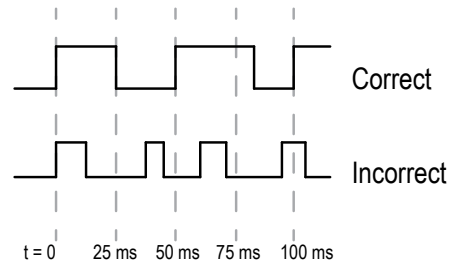

Bind the TL70 to the Gateway and Assign the Node Address

Before beginning the binding procedure, apply power to all the devices.

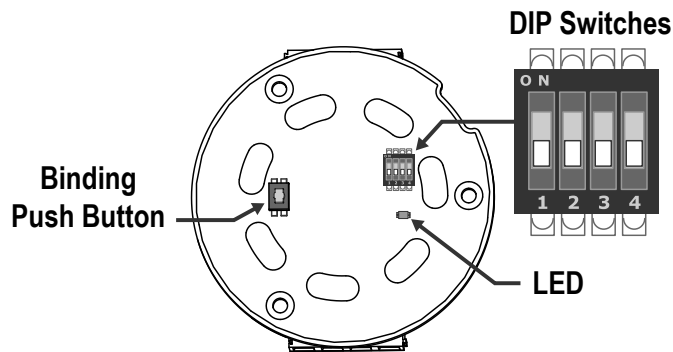

1. Enter binding mode on the Gateway.
 - For board modules, triple-click the button.
 - For housed models, triple-click button 2.

On the board modules, the green/red LED flashes. On the housed models, both LEDs flash red.
2. Assign the TL70 a Node address using the Gateway's rotary dials. Use the left rotary dial for the left digit and the right rotary dial for the right digit. For example, to assign your TL70 to Node 01, set the left dial to 0 and the right dial to 1. Valid Node addresses are 01 through 47.
3. Remove any components to access the circuit board in the base module of the TL70.
4. Enter binding mode on the TL70 by triple-clicking the button.

The bicolor LED flashes alternately while it searches for a Gateway in binding mode. After the TL70 is bound, the LED is red and green for four seconds (looks amber), then it flashes four times (looks amber). The TL70 automatically exits binding mode, cycles power, and enters Run mode.
5. Write the Node address on the provided label.

This makes it easier to identify the physical Node location within a multi-Node network.
6. Reassemble the components back onto the base.
7. Repeat steps 2 through 5 for as many TL70 Wireless Modular Tower Lights as are needed for your network.
8. After binding all TL70s, exit binding mode on the Gateway.
 - For board modules, double-click the button.
 - For housed models, double-click button 2.

LED Behavior for the Nodes

Nodes do not sample inputs until they are communicating with the Gateway. The radios and antennas must be a minimum distance apart to function properly. Recommended minimum distances are:

- 900 MHz 150 mW radios: 6 feet
- 900 MHz 1 Watt radios: 15 feet
- 2.4 GHz 65 mW radios: 1 foot

| LED (Bi-color) | Node Status |
|--|--------------------------|
| Flashing green | Radio link okay |
| Green and red flashing alternately | In Binding mode |
| Both colors are solid for 4 seconds, then flash 4 times; looks amber | Binding mode is complete |
| Flashing red, once every 3 seconds | Radio link error |
| Flashing red, once every second | Device error |


Modes of Operation

Node Controlled. The wireless TL70 Node can be operated similar to a wired model where the individual segments are activated by a PLC or manual switch. In this scenario, the Gateway only monitors the status of the light segments. An example application would be remotely monitoring the status of one or multiple machines from a single Gateway.

Gateway Controlled. In the Gateway-controlled mode, the TL70 Node only requires 10 to 30 V dc power. Input signals sent from the Gateway have full control over the status of all the segments. An example application would be a call-for-parts application with a TL70 Node mounted to a fork truck and the Gateway mounted in a work cell or stock room. When part pick-up or delivery is needed, the operator sends a signal to the fork truck driver. A multicolor TL70 could be used when there are multiple pick-up or delivery locations.

Sure Cross® User Configuration Tool

The User Configuration Tool (UCT) software runs on any Windows machine and uses a USB to RS-485 adapter cable to connect your Gateway to the computer.

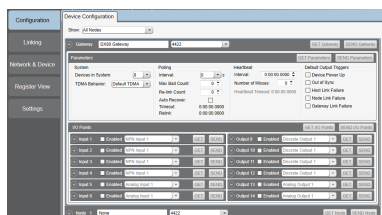

The User Configuration Tool (UCT) offers an easy way to link I/O points in your wireless network, view I/O register values graphically, and set system communication parameters when a host system is not part of the wireless network. Download the most recent revisions of the UCT software from Banner Engineering's website: <http://www.bannerengineering.com/wireless>.

The UCT requires a special USB to RS-485 (model number BWA-UCT-900 for 1 Watt radios, BWA-HW-006 can be used for all other radios) converter cable to pass information between your computer and the Gateway.

Modbus Registers

| I/O | Modbus Holding Register | | I/O Type | I/O Range | | Holding Register Representation (Dec.) | | Module # |
|-----|-------------------------|-------------------|--|-----------|------|--|------|----------|
| | Gateway | Any Node | | Min. | Max. | Min. | Max. | |
| 1 | 1 | 1 + (Node# × 16) | Discrete IN 1 / Bit-packed inputs | 0 | 1 | 0 | 1 | M1 |
| 2 | 2 | 2 + (Node# × 16) | Discrete IN 2 | 0 | 1 | 0 | 1 | M2 |
| 3 | 3 | 3 + (Node# × 16) | Discrete IN 3 | 0 | 1 | 0 | 1 | M3 |
| 4 | 4 | 4 + (Node# × 16) | Discrete IN 4 | 0 | 1 | 0 | 1 | M4 |
| 5 | 5 | 5 + (Node# × 16) | Discrete IN 5 / 32-bit event counter high word | 0 | 1 | 0 | 1 | M5 |
| 6 | 6 | 6 + (Node# × 16) | Discrete IN 6 / 32-bit event counter low word | 0 | 1 | 0 | 1 | M6 |
| 7 | 7 | 7 + (Node# × 16) | Reserved | | | | | |
| 8 | 8 | 8 + (Node# × 16) | Device Message | | | | | |
| 9 | 9 | 9 + (Node# × 16) | Discrete OUT 9 / Bit-picked outputs | 0 | 1 | 0 | 1 | M1 |
| 10 | 10 | 10 + (Node# × 16) | Discrete OUT 10 | 0 | 1 | 0 | 1 | M2 |
| 11 | 11 | 11 + (Node# × 16) | Discrete OUT 11 | 0 | 1 | 0 | 1 | M3 |
| 12 | 12 | 12 + (Node# × 16) | Discrete OUT 12 | 0 | 1 | 0 | 1 | M4 |
| 13 | 13 | 13 + (Node# × 16) | Discrete OUT 13 | 0 | 1 | 0 | 1 | M5 |
| 14 | 14 | 14 + (Node# × 16) | Discrete OUT 14 / Zero out (clear) the counter | 0 | 1 | 0 | 1 | M6 |

| I/O | Modbus Holding Register | | I/O Type | I/O Range | | Holding Register Representation (Dec.) | | Module # |
|-----|-------------------------|-------------------|-----------------|-----------|------|--|------|----------|
| | Gateway | Any Node | | Min. | Max. | Min. | Max. | |
| 15 | 15 | 15 + (Node# × 16) | Control Message | | | | | |
| 16 | 16 | 16 + (Node# × 16) | Reserved | | | | | |

Use the User Configuration Tool (UCT) software to define unique synchronous flash patterns for the lights.

Creating Flash Patterns

Use the User Configuration Tool (UCT) to set the Duty Cycle, For Outputs of Node 1, output 9, to 0x0F0F as shown below, to achieve this flash pattern.

Flash a TL70 light by entering a time-based bit mask into the Duty Cycle parameter for that output register. Bit 0 represents the first 62.5 ms time window, bit 1 represents the second 62.5 ms window, etc.

For example, turn ON the output from 0 to 250 ms, OFF from 250 to 500 ms, ON from 500 to 750 ms, then OFF again from 750 ms to 1 second by writing 0x0F0F to the appropriate output.

| Bit | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|-------|-------------------------------|----|----|----|------------------------------|----|---|---|-------------------------------|---|---|---|----------------------------|---|---|---|
| Bin | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 1 |
| Hex | 0 | | | | F | | | | 0 | | | | F | | | |
| Light | Turned off from 750 ms to 1 s | | | | Turned on from 500 to 750 ms | | | | Turned off from 250 to 500 ms | | | | Turned on from 0 to 250 ms | | | |

This example shows 0F0F being written to the Duty Cycle, For Outputs parameter for Node 1, output 9.

Device Parameters

Show Value as: ☐ Integer ☒ Hexadecimal

Get Send

| Device | I/O Number | Parameter | Value |
|--------|------------|-------------------------|-------|
| Node 1 | 9 | Duty Cycle, For Outputs | F0F |

Duty Cycle (Outputs only) (bits 15:0). This parameter defines the proportion of time the output is active. Using the 16-bit field, each "on" bit represents 1/16 seconds. For example, 0000 0000 0000 1111 (0x000F) sets the duty cycle to 1/4 seconds; 0000 0000 0000 0011 (0x0003) sets the duty cycle to 1/8 seconds. (Parameter number 0x04).

Supported in Gateway RF Firmware Version 2.7 and above.
Supported in Node RF Firmware Version 1.0 and above.

Specifications

Tower Light

Supply Voltage and Current

12 to 30 V dc (Outside the USA: 12 to 24 V dc, $\pm 10\%$) ¹

Indicators - Maximum current per LED color:

Blue, Green, White: 420 mA at 12 V dc; 145 mA at 30 V dc

Red, Yellow: 285 mA at 12 V dc; 120 mA at 30 V dc

Audible: 30 mA at 12 to 30 V dc

900 MHz Consumption: Maximum current draw is < 40 mA and typical current draw is < 30 mA at 24 V dc. (2.4 GHz consumption is less.)

Supply Protection Circuitry

Protected against transient voltages

Indicator Response Time

Off Response: 150 μ s (maximum) at 12 to 30 V dc

On Response: 180 ms (maximum) at 12 V dc; 50 ms (maximum) at 30 V dc

Audible Alarm

2.6 KHz \pm 250 Hz oscillation frequency; maximum intensity 92 dB at 1 m (3.3 ft) (typical)

Construction

Bases, segments, covers: polycarbonate

Operating Conditions

-40 °C to +50 °C (-40 °F to +122 °F)

95% at +50 °C maximum relative humidity (non-condensing)

Environmental Rating

IEC IP65

Vibration and Mechanical Shock

Vibration 10 Hz to 55 Hz 0.5 mm p-p amplitude per IEC 60068-2-6

Shock 15G 11 ms duration, half sine wave per IEC 60068-2-27

Certifications



Segment Lumens

| Color | Typical Wavelength or Color Temp | Typical Intensity (lm) |
|--------|----------------------------------|------------------------|
| Green | 525 nm | 92 |
| Red | 625 nm | 40 |
| Yellow | 590 nm | 22 |
| Blue | 470 nm | 32 |
| White | 5000 K | 125 |

Audible Adjustment

Rotate the cover until the desired volume is reached

Change in sound intensity from fully open to fully closed is 8 dB

Indicators

1 to 5 colors depending on model: Green, Red, Yellow, Blue, and White

Flash rates: 1.5 Hz \pm 10% and 3 Hz \pm 10%

LEDs are independently selected

Connections

5-pin M12/Euro-style quick disconnect, 8-pin M12/Euro-style quick disconnect, 150 mm (5.9 in) PVC cable with an M12/Euro-style quick disconnect, or 2 m (6.5 ft) unterminated cable, depending on model

Required Overcurrent Protection



WARNING: Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.

Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.

Supply wiring leads < 24 AWG shall not be spliced.

For additional product support, go to <http://www.bannerengineering.com>.

| Supply Wiring (AWG) | Required Overcurrent Protection (Amps) |
|---------------------|--|
| 20 | 5.0 |
| 22 | 3.0 |
| 24 | 2.0 |
| 26 | 1.0 |
| 28 | 0.8 |
| 30 | 0.5 |

Radio

Radio Range²

900 MHz, 1 Watt (Internal antenna): Up to 3.2 km (2 miles)

2.4 GHz, 65 mW (Internal antenna): Up to 1000 m (3280 ft) with line of sight

Minimum Separation Distance

900 MHz, 1 Watt: 4.57 m (15 ft)

2.4 GHz, 65 mW: 0.3 m (1 ft)

Spread Spectrum Technology

FHSS (Frequency Hopping Spread Spectrum)

900 MHz Compliance (1 Watt)

FCC ID UE3RM1809: This device complies with FCC Part 15, Subpart C, 15.247

IC: 7044A-RM1809

2.4 GHz Compliance

FCC ID UE300DX80-2400 - This device complies with FCC Part 15, Subpart C, 15.247

ETSI EN 300 328 V1.8.1 (2012-06)

IC: 7044A-DX8024

Radiated Immunity HF

10 V/m (EN 61000-4-3)

Link Timeout


Gateway: Configurable via User Configuration Tool (UCT) software

Node: Defined by Gateway

¹ For European applications, power this device from a Limited Power Source as defined in EN 60950-1.

² Radio range significantly decreases without line of sight. Always verify your wireless network's range by running a site survey.

Dimensions

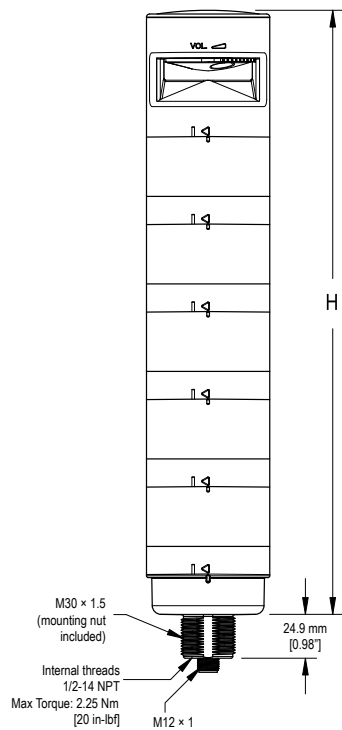

| Model | Height (H) |
|-----------------------------------|---------------------|
| 1 light module | 87.6 mm (3.45 in) |
| 1 light module, 1 audible module | 144.3 mm (5.68 in) |
| 2 light modules | 137.3 mm (5.41 in) |
| 2 light modules, 1 audible module | 194 mm (7.64 in) |
| 3 light modules | 187 mm (7.36 in) |
| 3 light modules, 1 audible module | 243.7 mm (9.59 in) |
| 4 light modules | 236.7 mm (9.32 in) |
| 4 light modules, 1 audible module | 293.4 mm (11.55 in) |
| 5 light modules | 286.4 mm (11.28 in) |
| 5 light modules, 1 audible module | 343.1 mm (13.5 in) |

Wiring Diagrams




| Sourcing (PNP) Input | Euro-style Male Pinouts | Key |
|--|--|---|
| <p>Module</p> <p>1</p> <p>3</p> <p>4</p> <p>2</p> <p>5</p> <p>M1</p> <p>M2</p> <p>M3</p> <p>12-30 V dc</p> | <p>1</p> <p>2</p> <p>3</p> <p>4</p> <p>5</p> | <p>1 = brown</p> <p>2 = white</p> <p>3 = blue</p> <p>4 = black</p> <p>5 = gray</p> <p>M1 = Module 1</p> <p>M2 = Module 2</p> <p>M3 = Module 3</p> |



| Sourcing (PNP) Input | Euro-style Male Pinouts | Key |
|----------------------|-------------------------|---|
| | | <p>1 = white 2 = brown 3 = green 4 = yellow 5 = gray 6 = pink 7 = blue 8 = red (event counter input, if enabled)</p> <p>M1 = Module 1 M2 = Module 2 M3 = Module 3 M4 = Module 4 M5 = Module 5 M6 = Module 6</p> |

Input wires M1 through M6 can be used to either control the light segments or can be configured as external PNP Inputs. Refer to the DIP switch settings for configuration instructions.

Accessories





Cordsets
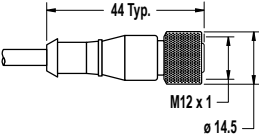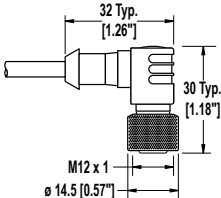
| 5-Pin Threaded M12/Euro-Style Cordsets—Single Ended | | | | | |
|---|-----------------|-------------|--|--|--|
| Model | Length | Style | Dimensions | Pinout (Female) | |
| MQDC1-501.5 | 0.50 m (1.5 ft) | Straight |  |  1 = Brown 2 = White 3 = Blue 4 = Black 5 = Gray | |
| MQDC1-506 | 1.83 m (6 ft) | | | | |
| MQDC1-515 | 4.57 m (15 ft) | | | | |
| MQDC1-530 | 9.14 m (30 ft) | | | | |
| MQDC1-506RA | 1.83 m (6 ft) | Right-Angle |  | | |
| MQDC1-515RA | 4.57 m (15 ft) | | | | |
| MQDC1-530RA | 9.14 m (30 ft) | | | | |
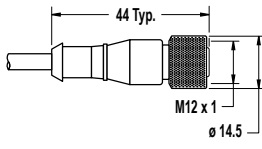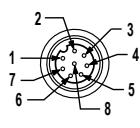
| 8-Pin Threaded M12/Euro-Style Cordsets with Open-Shield | | | | |
|---|----------------|-------------|--|--|
| Model | Length | Style | Dimensions | Pinout (Female) |
| MQDC2S-806 | 1.83 m (6 ft) | Straight |  |  |
| MQDC2S-815 | 4.57 m (15 ft) | | | |
| MQDC2S-830 | 9.14 m (30 ft) | | | |
| MQDC2S-850 | 15.2 m (50 ft) | Right-Angle | | <p>1 = White 2 = Brown 3 = Green 4 = Yellow 5 = Gray 6 = Pink 7 = Blue 8 = Red</p> |
| MQDC2S-806RA | 1.83 m (6 ft) | | | |
| MQDC2S-815RA | 4.57 m (15 ft) | | | |
| MQDC2S-830RA | 9.14 m (30 ft) | | | |
| MQDC2S-850RA | 15.2 m (50 ft) | | | |




All measurements are listed in millimeters, unless noted otherwise.

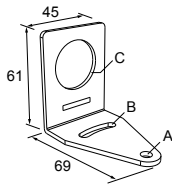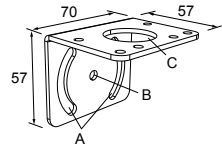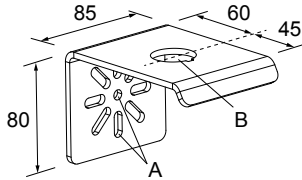
Mounting Brackets


| | |
|--|--|
| <p>SMB30A</p> <ul style="list-style-type: none"> Right-angle bracket with curved slot for versatile orientation Clearance for M6 (¼ in) hardware Mounting hole for 30 mm sensor 12-ga. stainless steel  <p>Hole center spacing: A to B=40 Hole size: A=ø 6.3, B= 27.1 x 6.3, C=ø 30.5</p> | <p>SMB30MM</p> <ul style="list-style-type: none"> 12-ga. stainless steel bracket with curved mounting slots for versatile orientation Clearance for M6 (¼ in) hardware Mounting hole for 30 mm sensor  <p>Hole center spacing: A = 51, A to B = 25.4 Hole size: A = 42.6 x 7, B = ø 6.4, C = ø 30.1</p> |
| <p>SMBAMS30P</p> <ul style="list-style-type: none"> Flat SMBAMS series bracket 30 mm hole for mounting sensors Articulation slots for 90°+ rotation 12-ga. 300 series stainless steel  <p>Hole center spacing: A=26.0, A to B=13.0 Hole size: A=26.8 x 7.0, B=ø 6.5, C=ø 31.0</p> | <p>SSA-MBK-EEC1</p> <ul style="list-style-type: none"> Single 30 mm hole 8 gauge steel, black finish (zinc-plated) Front surface for customer applied labels  <p>Hole size: A = ø 7 , B = ø 30</p> |

All measurements are listed in millimeters, unless noted otherwise.



Elevated Mount System

| Model | | | Features | Components |
|--------------------------------------|-------------------------------------|--------------------------------------|--|---|
| SA-M30 - Black Polycarbonate | | | <ul style="list-style-type: none">Streamlined black PC or Gray PC thread coverCovers M30 thread on the light baseMounting hardware included |  |
| SA-M30C - Gray Polycarbonate | | | | |
| Polished 304 Stainless Steel | Black Anodized Aluminum | Clear Anodized Aluminum | <ul style="list-style-type: none">Elevated-use stand-off pipe (½ in. NPSM/DN15)Polished 304 stainless steel, black anodized aluminum, or clear anodized aluminum surface½ in. NPT thread at both endsCompatible with most industrial environments |  |
| SOP-E12-150SS 150 mm (6 in) long | SOP-E12-150A 150 mm (6 in) long | SOP-E12-150AC 150 mm (6 in) long | | |
| SOP-E12-300SS 300 mm (12 in) long | SOP-E12-300A 300 mm (12 in) long | SOP-E12-300AC 300 mm (12 in) long | | |
| SOP-E12-900SS 900 mm (36 in) long | SOP-E12-900A 900 mm (36 in) long | SOP-E12-900AC 900 mm (36 in) long | | |
| SA-E12M30 - Black Acetal | | | | |
| SA-E12M30C - White UHMW | | | <ul style="list-style-type: none">Streamlined black acetal or white UHMW mounting base adapter/coverConnects between ½ in. NPSM/DN15 pipe and 30 mm (1-3/16 in) drilled holeMounting hardware included |  |

| Pipe Mounting Flange | | | |
|----------------------|--|-------------------------------------|--|
| Model | Features | Construction | |
| SA-F12 | <ul style="list-style-type: none"> For use elevated stand-off pipes (½ in. NPSM/DN15) M5 mounting hardware and nitrile gasket included | Die-cast zinc base with black paint |  |
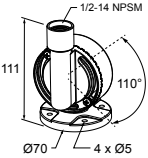
| Foldable Mounting Brackets | | | |
|----------------------------|---|---------------------|---|
| Model | Features | Construction | |
| SA-FFB12 | <ul style="list-style-type: none"> For use with 1/2 inch stand-off pipes Stainless steel hardware | Black polycarbonate |  |
| SA-FFB12C | | Gray polycarbonate | |

LMB Sealed Right-Angle Brackets

| Model | Description | Construction | |
|-----------|---|---------------------|---|
| LMB30RA | Direct-Mount Models: Bracket kit with base, 30 mm adapter, set screw, fasteners, o-rings, and gaskets | Black polycarbonate |  |
| LMB30RAC | | Gray polycarbonate | |
| LMBE12RA | Pipe-Mount Models: Bracket kit with base, ½-14 pipe adapter, set screw, fasteners, o-rings, and gaskets. For use with stand-off pipe (listed and sold separately) | Black polycarbonate |  |
| LMBE12RAC | | Gray polycarbonate | |

Banner Engineering Corp. Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp.

Copyright Notice

Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. For the most recent version of any documentation, refer to: www.bannerengineering.com. © Banner Engineering Corp. All rights reserved.



Wireless Modular Tower Light

Monitor where you couldn't before: Effectively manage your factory visually without the cost of wiring.

- **Save money and time** – eliminate costly and time-consuming wire runs
- Scalable **all-in-one solution** with two-way wireless communication and visual status indication
- **Improve productivity** with a clear, easy-to-read signal tower light
- Use in harsh environments with rugged, water-resistant IP65 housing with UV-stabilized material
- Segments appear gray when off to **eliminate false indication** from ambient light






TL70 Wireless Modular Tower Light

Eliminate the Cost of Wiring

Remote status monitoring without lengthy and expensive cable runs.

1-Way Communication

The TL70 relays machine status to a remote device

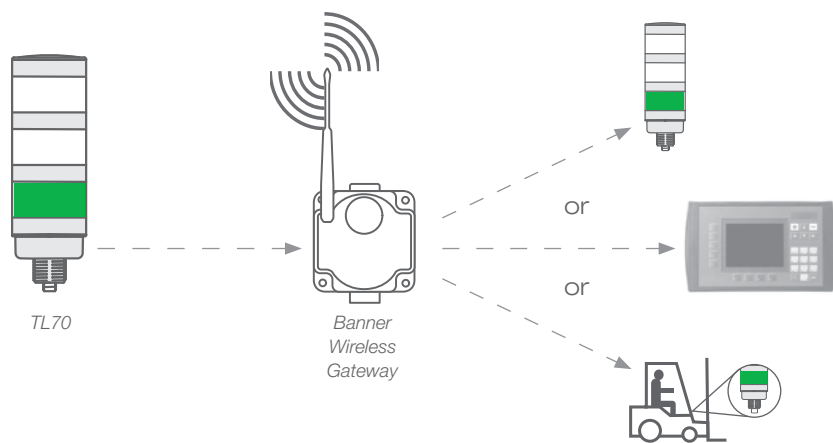

TL70 Wireless Tower Light

- A TL70 emulates machine status and transmits updates over a wireless network
- A remote TL70 indicator receives the updates and displays the appropriate status, enabling remote monitoring without requiring any cable runs



PLC or HMI

- Machine status updates are transmitted by the TL70 over a secure wireless network
- Status updates are received by the device, triggering an action or prompting a response from an operator at a workstation away from the machine





Mobile Equipment

- Status updates are communicated over a robust wireless network
- A device installed on mobile equipment receives updates from the TL70
- Operators can respond quickly to changing conditions from the mobile equipment

2-Way Communication

The TL70 relays a status to a remote device
AND receives input from a remote device

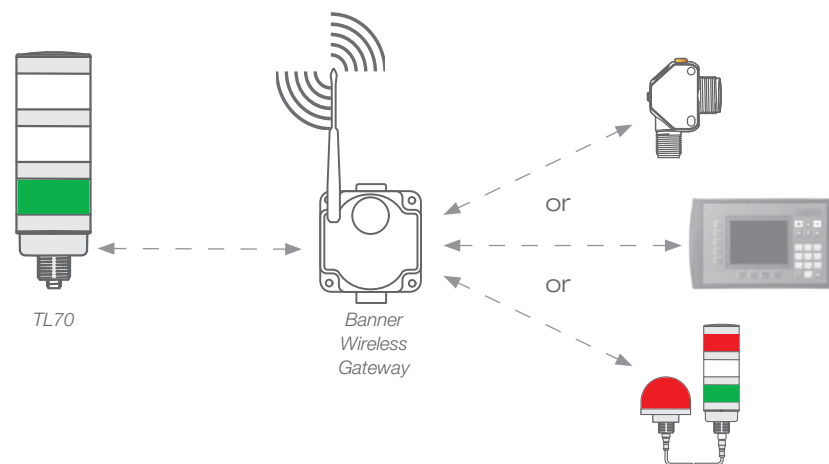


Machine or Sensor Input

- Status updates are transmitted to the TL70 indicator
- The TL70 receives the updates and displays the appropriate status, providing at-a-glance status information



PLC or HMI

- Conditions are communicated by the TL70 to a device
- A response from the device is transmitted back to the TL70 indicator
- The TL70 displays the updated status, providing an easy-to-see acknowledgement of any action



Personnel Input


- A change in status initiated by an operator is transmitted over the wireless network
- An operator at the receiving device acknowledges the status update
- The updated status is displayed by both TL70s, enabling visual communication between stations

The Easiest Tower Light to Install

The TL70 tower light design is user friendly with just a few easy steps to complete installation.


1. Bind Base to Gateway

- Enter binding mode on TL70 with simple push button
- Scalable up to 47 Nodes per Gateway
- Easy-access dials to assign Node(s) address

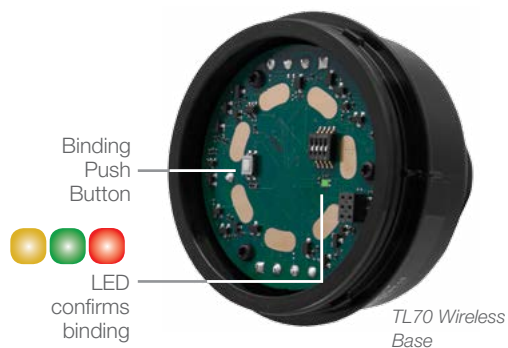

2. Build Light Segments

- Assign module position (switches 1-6)
- Assign flash rate or audible tone (switches 7-8)

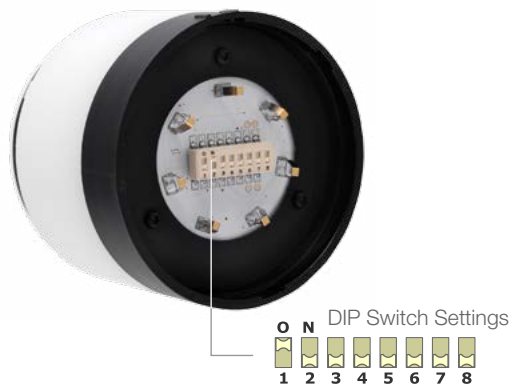

- Align segment markings
- Press together
- Twist to lock



3. Map Base to Gateway

- Universal configuration tool license-free software
- Assign I/O








TL70 Wireless
Modular Tower Light

Order Components to Build your Own

Base (1) and Light Segments (2)

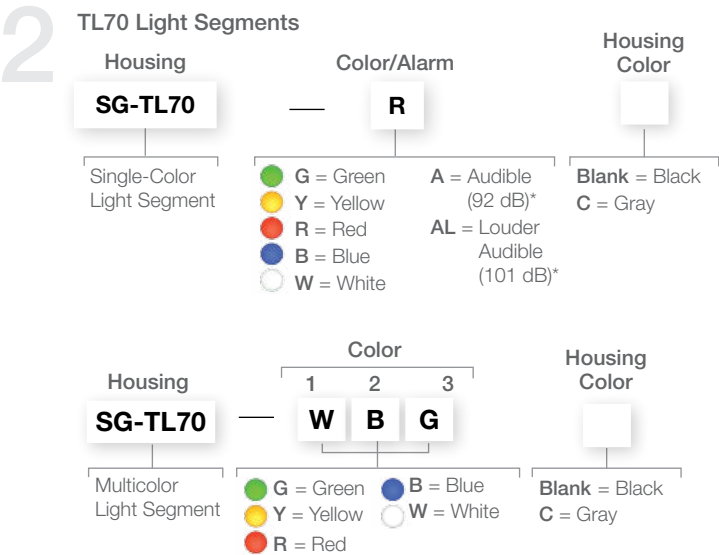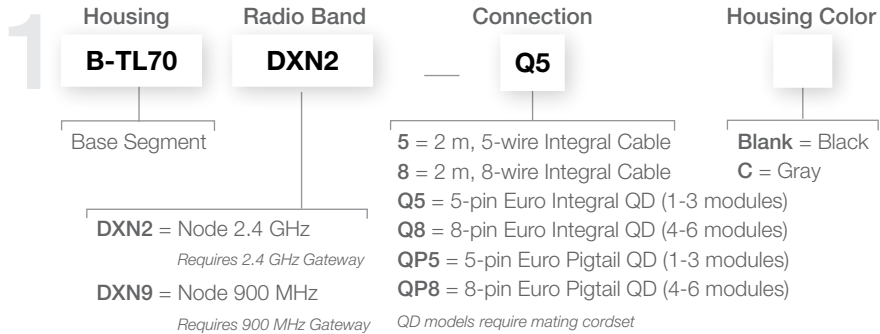

Order Preassembled

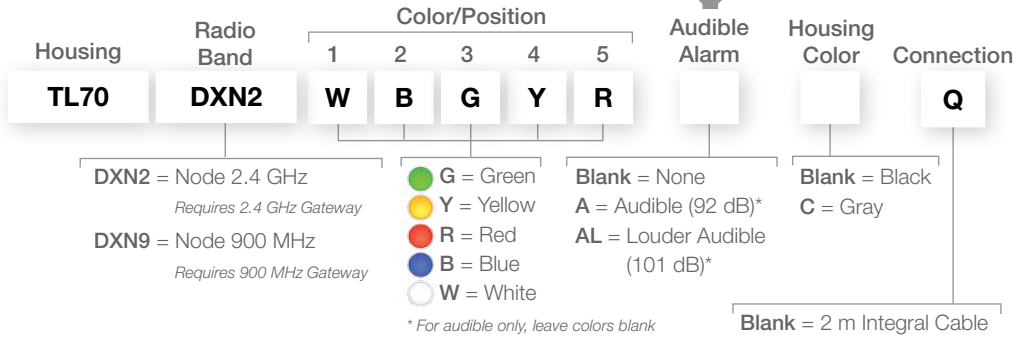

| | |
|-----------------------|---|
| Supply Voltage | 12 to 30 V dc |
| Construction | Bases, Covers and Light Segments: Polycarbonate |
| Environmental Rating | IP65 |
| Operating Temperature | -40 to +50 °C (-40 to +122 °F) |
| Certifications | CE UL LISTED |

PM Gateways (10-30 V dc)

| Models | Description | Frequency |
|-------------------------------|-------------------------------|-----------|
| DX80G9M6S-PM2 | 4 Discrete in, 4 Discrete out | 900 MHz |
| DX80G2M6S-PM2 | 2 Analog in, 2 Analog out | 2.4 GHz |
| DX80G9M6S-PM8 | 6 Discrete in, 6 Discrete out | 900 MHz |
| DX80G2M6S-PM8 | | 2.4 GHz |

Gateway Pros (10-30 V dc)

| | | |
|-----------------------------|-------------------------------------|---------|
| DX80P9T6S-P | | 900 MHz |
| DX80P2T6S-P | Modbus/TCP to EtherNet/IP Converter | 2.4 GHz |
| DX80P9A6S-P | | 900 MHz |
| DX80P2A6S-P | | 2.4 GHz |

MultiHop Modbus (FlexPower†)

| | | |
|----------------------------|--|---------|
| DX80DR9M-H | Serial interface: user selectable between RS-485 or RS-232 | 900 MHz |
| DX80DR2M-H | | 2.4 GHz |

† FlexPower® power options allow for 10 – 30 V DC, solar, and battery power sources for low power applications

Accessories

Cordsets

5-Pin M12/
Euro-Style Cordsets*
Straight connector
models listed

[MQDC1-506](#)
2 m (6.5')
[MQDC1-515](#)
5 m (15')
[MQDC1-530](#)
9 m (30')

8-Pin M12/
Euro-Style Cordsets**
Straight connector
models listed.

[MQDC2S-806](#)
2 m (6.5')
[MQDC2S-815](#)
5 m (15')
[MQDC2S-830](#)
9 m (30')

** For right-angle models add RA to the end of model number (example, [MQDC1-506RA](#))




[SMBAMS30RA70](#)
Right-angle bracket



TL70 Wireless
Modular Tower Light

Link to
data sheets

WLC90 Heavy Duty LED Light




Banner's WLC90 Heavy Duty Light is designed to operate in harsh environments including outdoors and indoors. They are rugged and energy-efficient. Banner's WLC90 Heavy Duty Light is an excellent choice for machine guarding and food processing.

- Rugged, chemical, and water resistant with IP67 rating and shock rating
- Wide operating temperature range with an internal monitoring circuit that alerts the LED to a safe level of extreme temperatures
- Three beam choices to suit your application needs
- Two and six brackets for versatile mounting to direct the light in any direction
- Models have three discrete intensity level settings

| Model | Beam Angle | Connection | Window |
|-----------|-------------|----------------------------------|--------|
| WLC90W120 | 120 degrees | Integral 4 Pin Euro QD Side Exit | Window |
| WLC90W150 | 150 degrees | Integral 4 Pin Euro QD Side Exit | Window |
| WLC90W180 | 180 degrees | Integral 4 Pin Euro QD Side Exit | Window |
| WLC90W120 | 120 degrees | Integral 4 Pin Euro QD Side Exit | Window |
| WLC90W150 | 150 degrees | Integral 4 Pin Euro QD Side Exit | Window |
| WLC90W180 | 180 degrees | Integral 4 Pin Euro QD Side Exit | Window |
| WLC90W120 | 120 degrees | Integral 4 Pin Euro QD Side Exit | Window |
| WLC90W150 | 150 degrees | Integral 4 Pin Euro QD Side Exit | Window |
| WLC90W180 | 180 degrees | Integral 4 Pin Euro QD Side Exit | Window |

Notes:
1. Mount 4-pin integral QD. To order the 2 or 6 pin S.E.T. cable models, send the suffix "Q" or "S.E.T." to the model number. Models with a QD connector require a mating cable.
2. Risk Group 2: Potentially hazardous optical radiation emitted from this product. See label on the operating lamp. May be harmful to the eye. Risk Group 2 (RSG 2) product used as a warning optical hazard. If warning response (RSG 2) the exposure duration is 0.25 seconds and maximum.

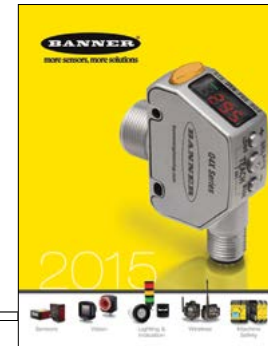


Link to
catalog

Link to the
Banner website



Link to
CAD files

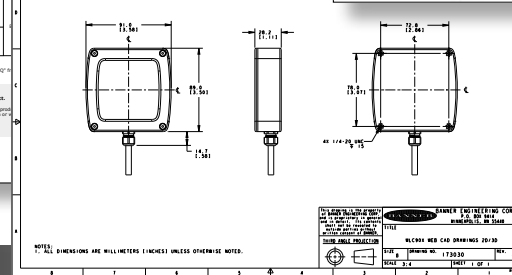

Talk with an app engineer. Get product specs. Order now.
1-888-373-6767 • bannerengineering.com
minneapolis, mn

